

X-Style Banner Stand

CAUTION

- Intended use for 24" x 60" Vinyl Outdoor / Indoor Banners with grommets. If used with other sizes or materials, it will be at your own risk.
- This is not suitable for use in high traffic or confined areas.
- Inspect both the stand and the banner prior to use.
- Do not use if the stand arms show any signs of cracks or damage.
- Do not use the stand if the grommet holes or pockets show signs of wear & tear, or if it is damaged.
- This banner stand is not a toy; it is not intended or suitable for use by children.




Take the stand and pole out of the carrying bag.



While holding the stand against the floor, extend the front legs forward, away from you.



Insert the two upper poles into the top of the base.

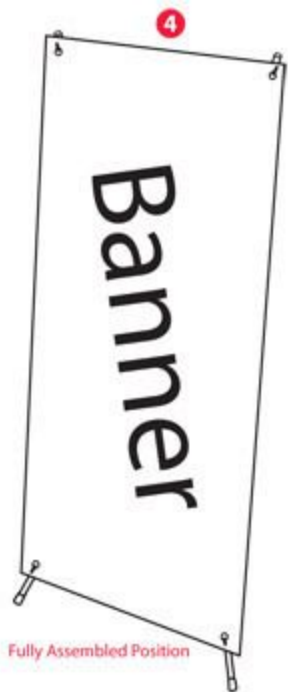

Hang the banner on the top hooks first and then stretch over the bottom hooks. (Bottom hooks are adjustable)